




WHEEL KIT FOR THE COMPACT LOOM (optional)

NEW WHEEL KIT Front & Back
THE KIT INCLUDES:
4 Wood blocks with wheels
8 Flat head screw #8 - 1 1/4"

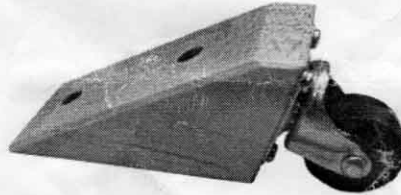

INSTRUCTIONS:

If you need to move the loom frequently, you can install the wheel kit.
With a 7/64" or 1/8" drill bit make two holes according to fig.1.

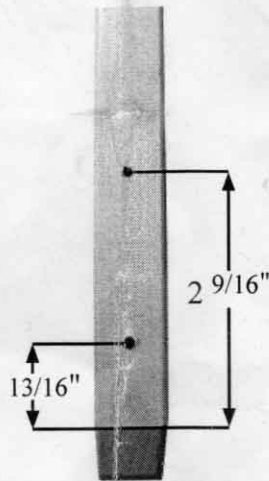


fig.1

For each set, affix the wood block to le leg using 2 screw flat head #8 - 1 1/4".

t.

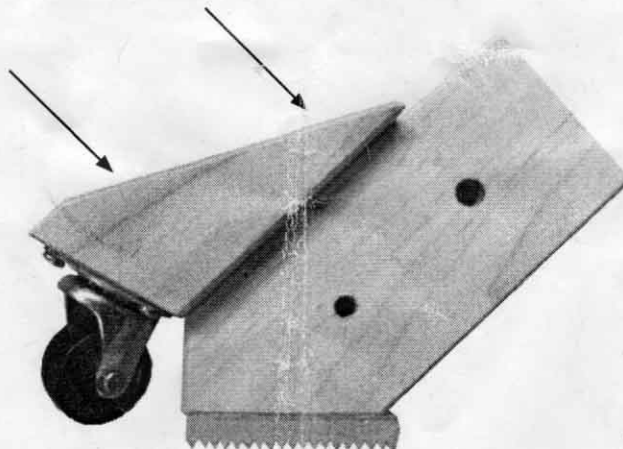


fig.2